


# Installation Guide (ATM-470C)

## Important Notes:

All ATMs are thoroughly inspected and fully tested operational in factory.

We accept no liability whatsoever for any losses due to improper operation, or any unauthorized alternation.


All trademarks contained in this installation guide are the property of their respective owners.

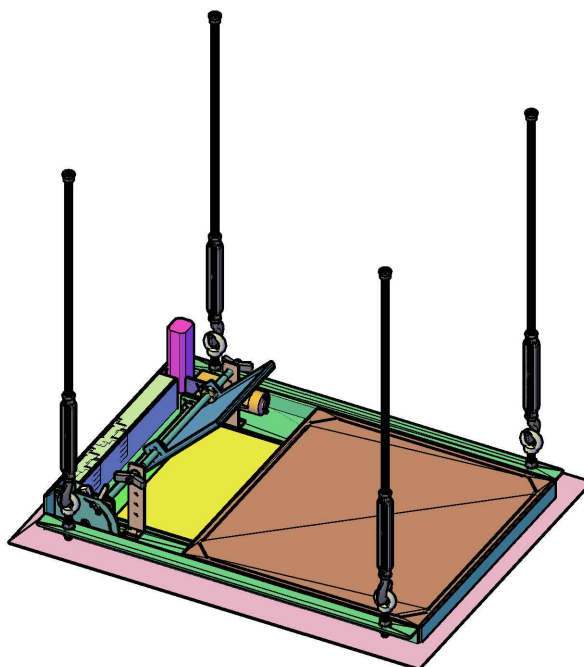

## Step 1:

Prepare the threaded rods of length ( $X - 220\text{mm}$ ) according to the illustration drawing below.


Total of 4 pieces of M8 threaded rods are required.

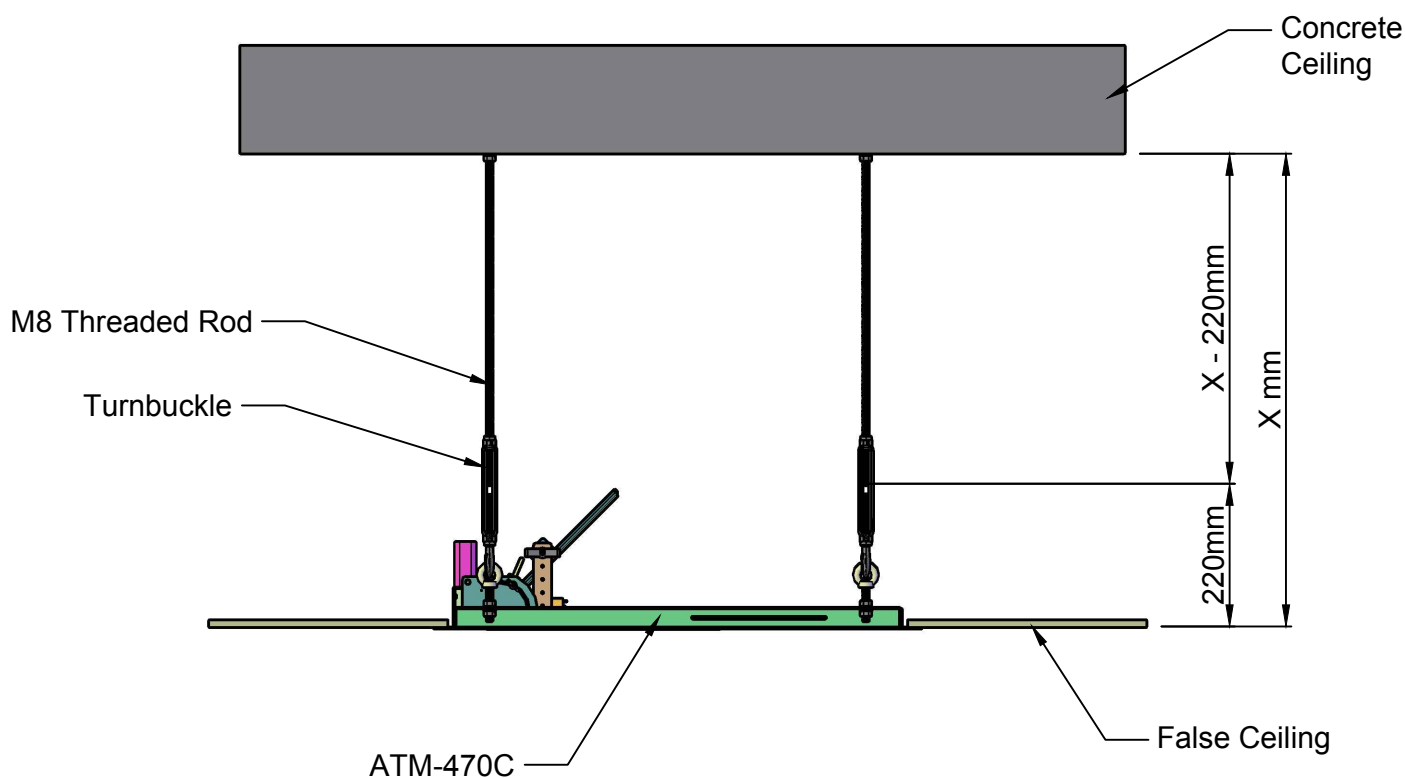

# Installation Guide (ATM-470C)

## Step 2:

Cut a rectangular opening at the false ceiling according to the dimension indicated below

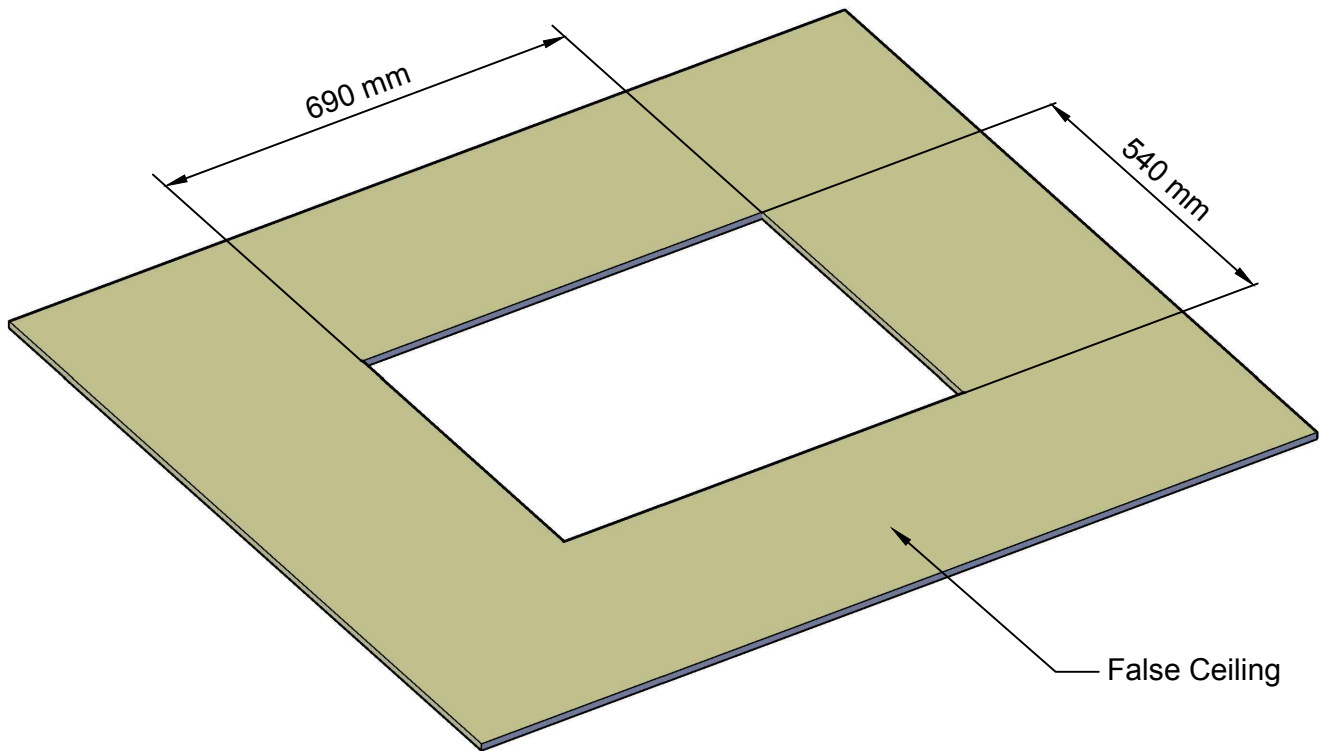


## Step 3:


Anchor the 4 pieces of M8 threaded rods into the concrete ceiling.

The threaded rods must be 569mm apart in length and 494mm apart in width.

Position the first threaded rod 60.50mm and 23mm away from one edge of the false ceiling opening.

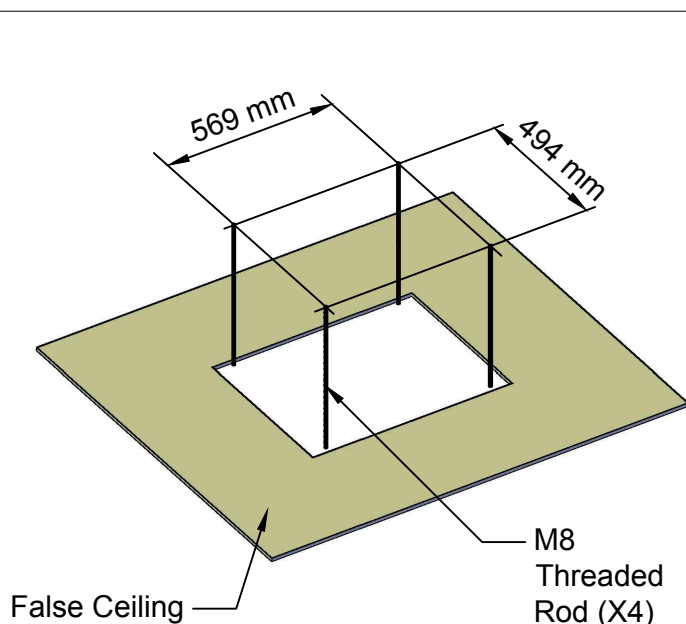


### Plan View

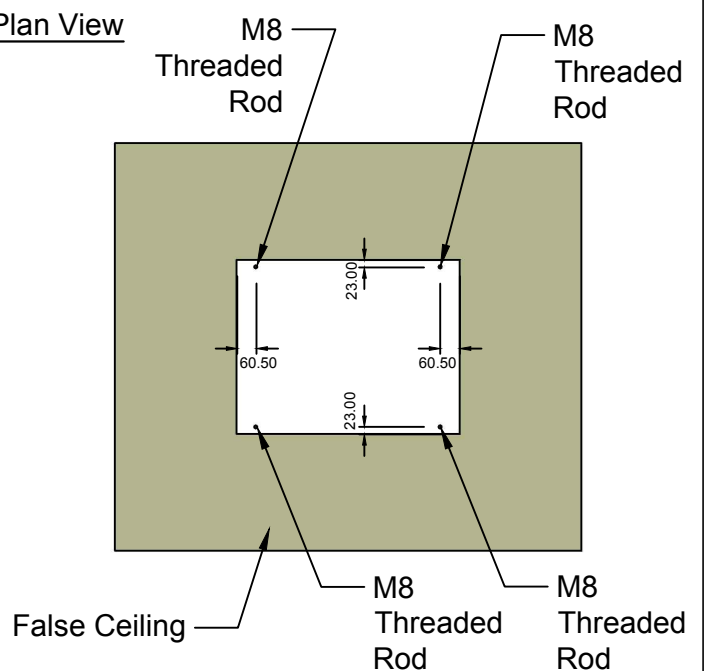


# Installation Guide (ATM-470C)

**Step 4:**  
Attach the turnbuckle at each end of the threaded rods

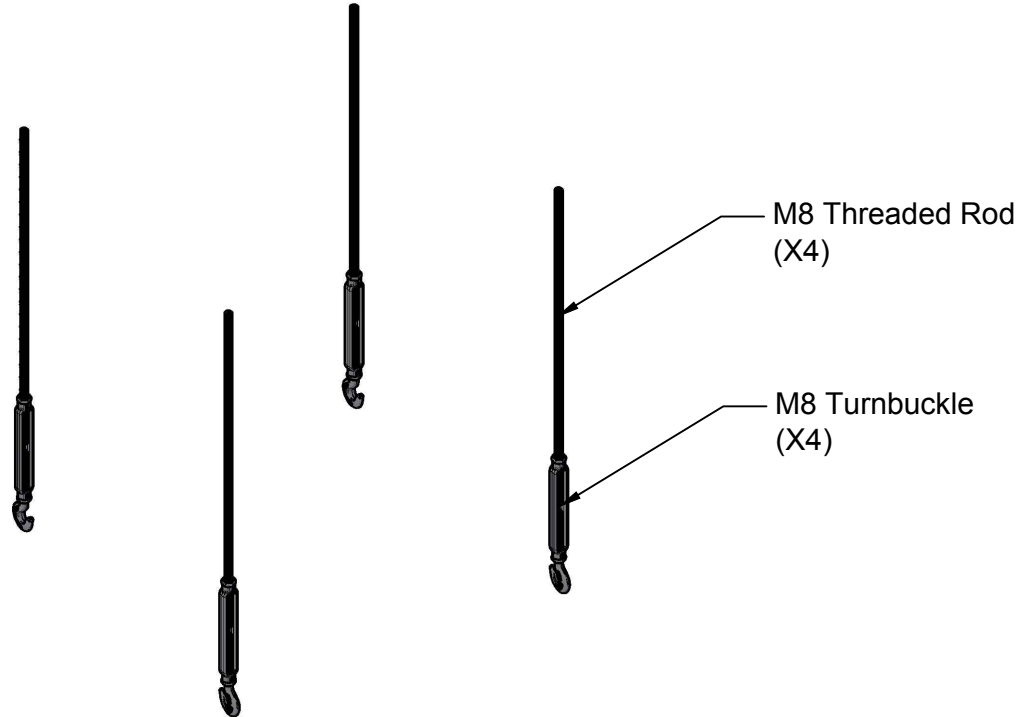


**Step 5:**  
Lift up the ATM-470C. Use the hooks at the turnbuckles to hang the ATM-470C at the M8 eye bolt provided.

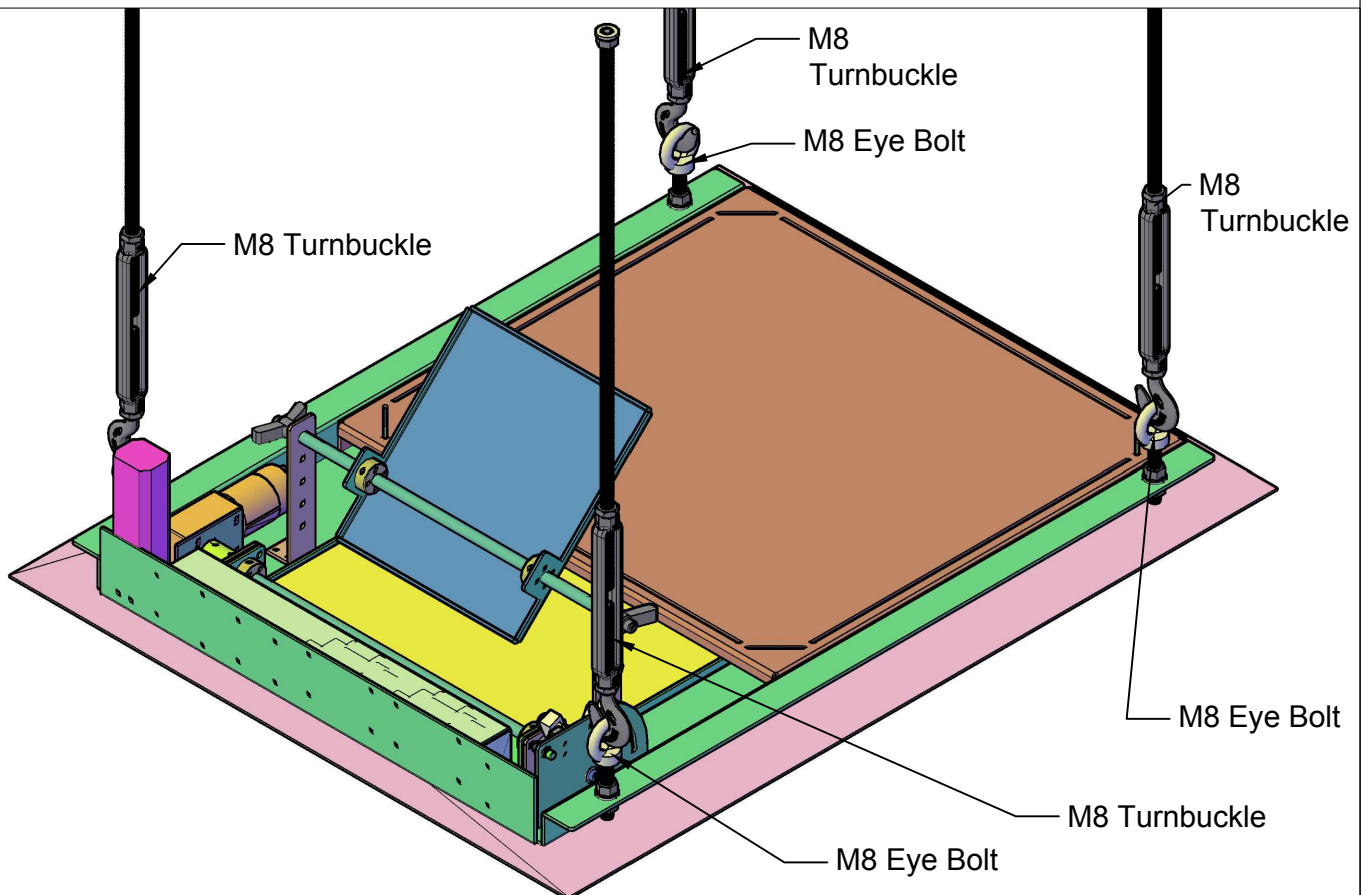

# Installation Guide (ATM-470C)


## Step 6:

Adjust the 4 turnbuckles so that there is no gap in between the ATM-470C lowest plate and the false ceiling.

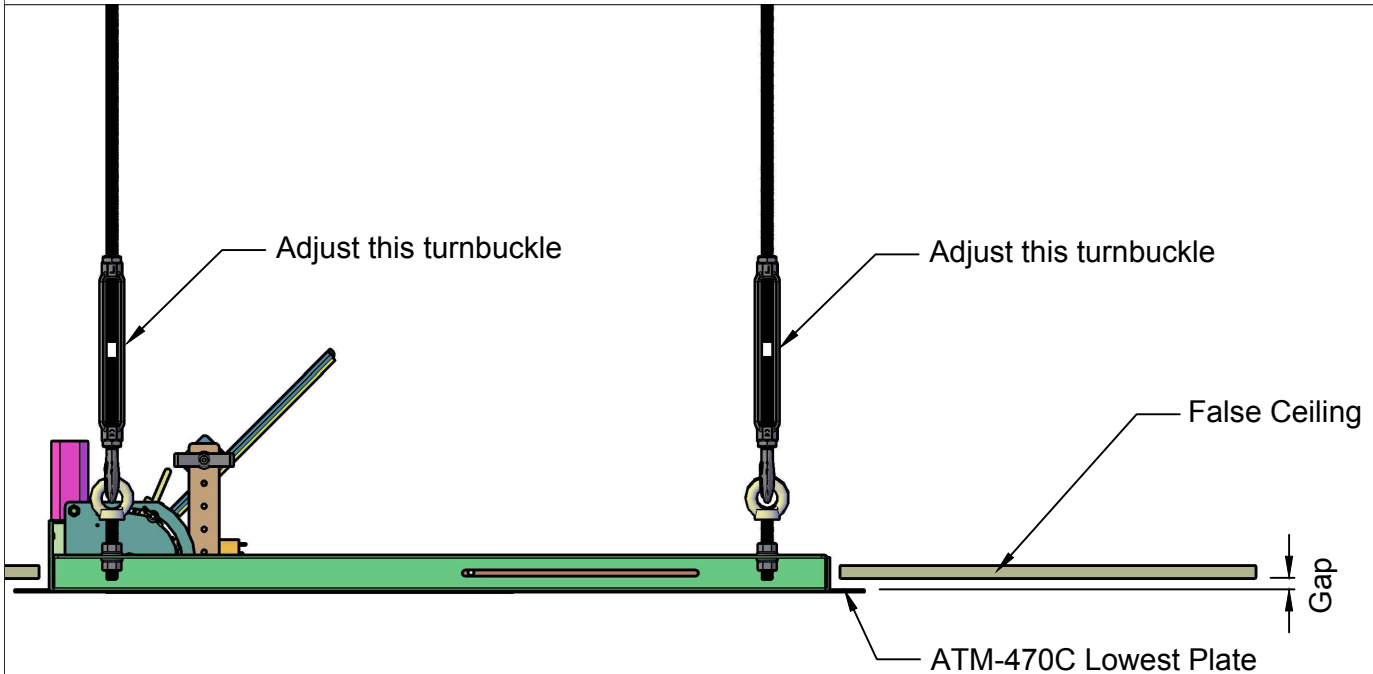

## Step 7:


Before Power on, remove the two screws that hold the lower mirror plate.

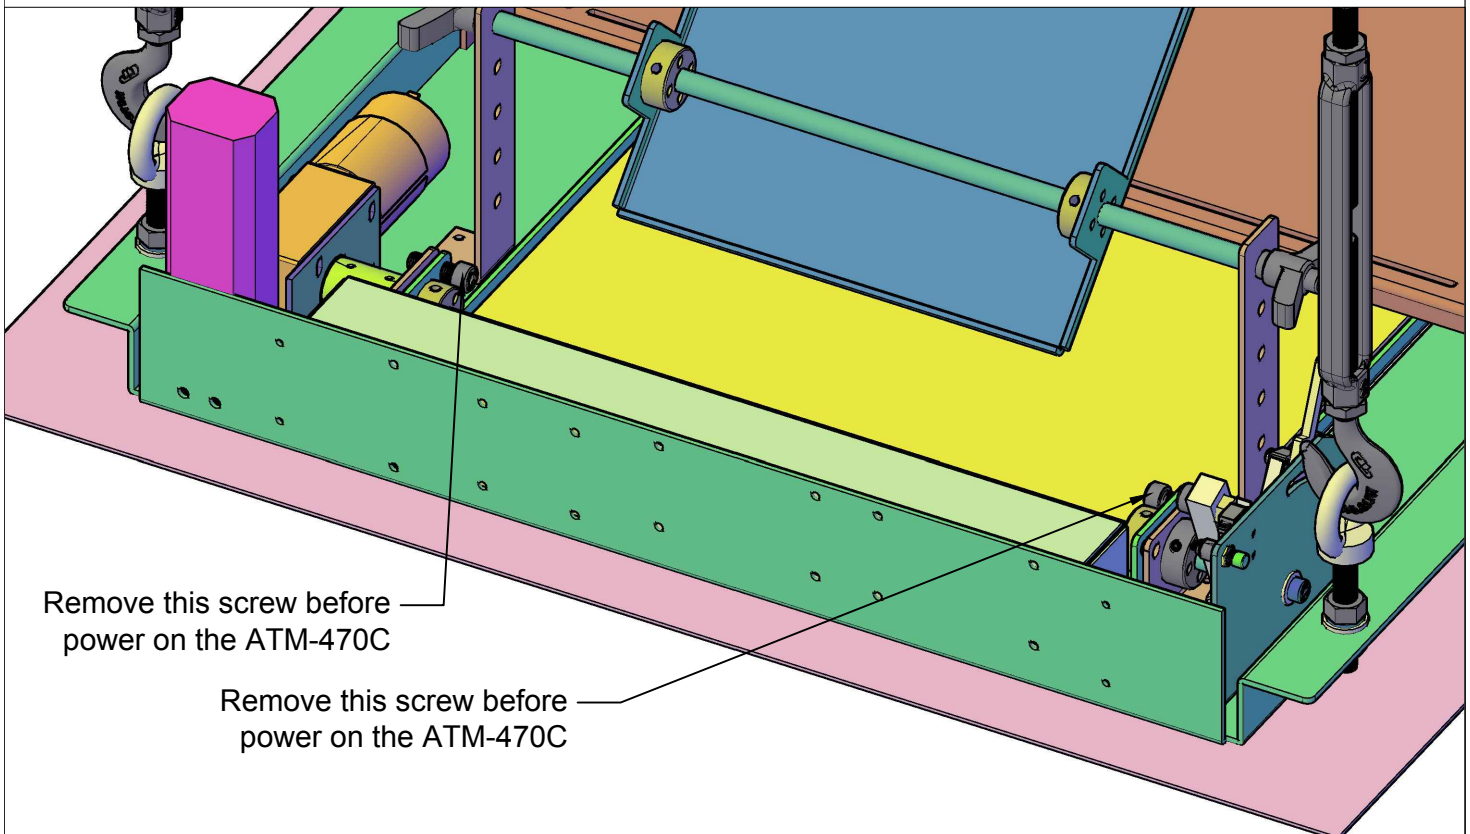

# Installation Guide (ATM-470C)

## Step 8:

To adjust the upper & lower mirror angular position, follow the instruction given below..

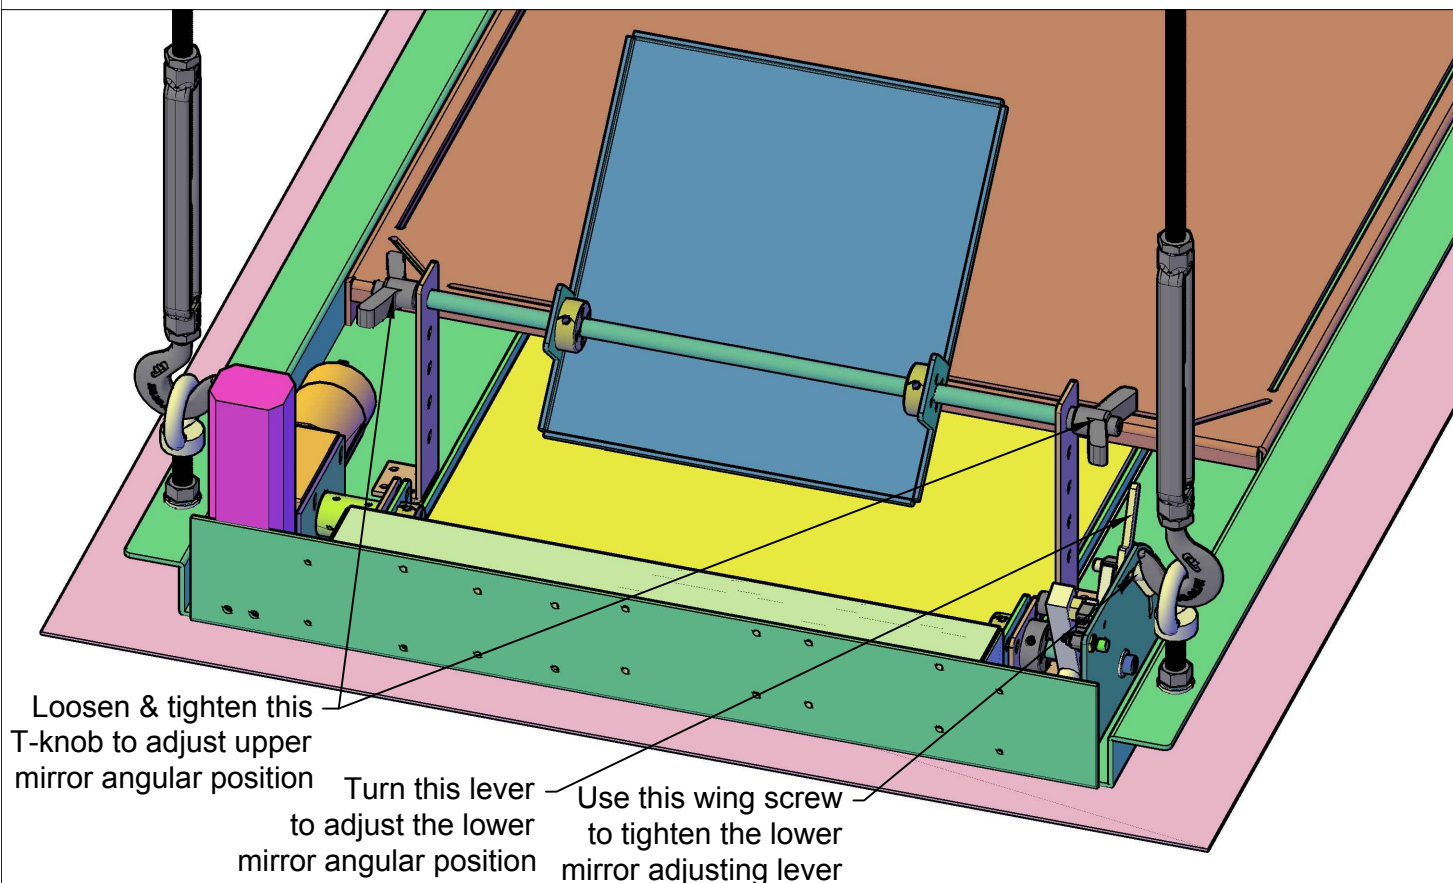

## Note:

Use the remote controller (AVA-315) to close the lower mirror by pressing the up button. Press the down button to open the lower mirror.

